



## REDUCE DOWNTIME. INCREASE PRODUCTIVITY. PRESERVE EQUIPMENT VALUE.

Failure to perform regular maintenance on equipment is a primary cause of breakdowns, and over time can greatly reduce the value of your machine. Orange Armor® Uptime Kits are designed to help you properly care for your equipment, resulting in consistent productivity, reduction of major repair costs and maximum equipment value.

Each kit contains air, fuel, oil and hydraulic filters, spark plugs, or other parts needed for scheduled maintenance specified for each machine. The larger kits also include basic wear parts and are shipped in lockable, reusable storage trunks at no additional cost.

Make scheduled maintenance easier, more convenient and more affordable with an Orange Armor Uptime Kit customized for your equipment.



Basic Kits



1000 hour kits



### KEY FEATURES/BENEFITS

- Up to 15% savings versus buying parts individually
- Customized for each machine to ensure proper maintenance
- Larger kits include some wear items in addition to maintenance items
- Reusable, lockable storage trunks provided at no additional cost on larger kits

### TRENCHERS

PART NUMBERS	MODEL(S)	KIT TYPE
190-2200	C12	Basic
190-2426	C14	Basic
190-2430	C16 / C16X	Basic
190-2435	C24X	Basic
190-2440	C30X / VP30	Basic
190-1759	RT12	Basic
190-1760	RT16	Basic
190-1761	RT20 / 24	Basic
190-1764	RT45 T2	Basic
190-1766	410SX T4i	Basic
190-1767	420SX T2 / T4i	Basic
190-2103	RT30	Basic
190-2122	RT80Q T4F	1000 HR
190-2142	RT120 T4i	1000 HR
190-2147	RT100 T4i	1000 HR
190-2151	RT45 T4F	1000 HR
190-2152	RT45 T4i	1000 HR
190-2153	RT45 T4F	Basic
190-2154	RT45 T4i	Basic
190-2166	RT120Q T4i	Basic
190-2176	410SX GAS	1000 HR
190-2181	RT55 T4i	1000 HR
190-2151	RT45 T4F	1000 HR

### TRENCHLESS

PART NUMBERS	MODEL(S)	KIT TYPE
190-2100	FM25 / FM25X	Basic
190-2105	FM13V / FM13X	Basic
190-2131	JT5 T4F	1000 HR
190-2172	JT9 / JT10 T4F	1000 HR
190-2174	JT9 / JT10 T4i	1000 HR
190-2112	JT20 / JT20XP T4F / T4i	1000 HR
190-2106	JT25 T3	1000 HR
190-2107	JT25 T4i	1000 HR
190-2138	JT25 / JT30 / AT30 T4F	Basic
190-2136	JT / AT30 T3	1000 HR
190-2137	JT / AT30 T4i	1000 HR
190-2445	JT / AT40 HRC	Basic
190-2447	JT / AT40 LRC	Basic
190-2116	JT / AT100 T3	1000 HR
190-2117	JT / AT100 HRC	Basic
190-2126	JT1220 T4i	1000 HR
190-2173	JT922 T3	1000 HR
190-2191	MR90	1000 HR
190-2156	JT/AT60 T3	1000 HR

### VACUUM EXCAVATORS

PART NUMBERS	MODEL(S)	KIT TYPE
190-2101	FX20	Basic
190-2102	FX25/MV800	Basic
190-2104	FX30/FXT30 T3/T4F (NOT T4i)	1000 HR
190-2161	FX50/FXT50 T4i	1000 HR
190-2162	FX50/FXT50 T4F	1000 HR
190-2186	FX60 T4i	1000 HR
190-2187	FX65 / FXT65 T4 / T4i	1000 HR
190-2454	HX30	Basic
190-2455	HX50	Basic
190-2456	HX75	Basic

### MINI SKID STEERS

PART NUMBERS	MODEL(S)	KIT TYPE
190-1762	SK350	Basic
190-1763	SK650 / SK750 / SK755 T4i	Basic
190-2195	SK600 / SK800	Basic
190-2196	SK850 / SK1050 / SK1550	Basic
190-2197	ST37X	Basic
190-1765	R300	Basic